

One-Click™ Cleaner M20 Instruction Manual

Thank you for choosing the **One-Click™ Cleaner M20**. The **One-Click™ Cleaner M20** is a high-performance device designed for cleaning the ferrule end faces of 2.0mm connectors. Carefully read this instruction manual before using this device. Please keep this instruction manual for future reference.

1. Safety precautions

	Though our device is deemed safe, improper usage or handling can still inflict injury to others.
	One-Click™ Cleaner M20 is designed to clean 2.0mm based connectors only. Fujikura is not liable for damage caused in attempt to apply this device to other applications.

2. Notes on usage

- Do not attempt to disassemble as this can cause damage to the device.
- Do not re-use cleaning cloth as this will eliminate its cleaning ability.
- Do not touch the cleaning cloth as this will cause contamination.
- Do not pull the cleaning cloth, use only the device body.
- Do not use this cleaner when the cloth is empty, as this can cause damage to the connector.


3. Notes on storage for extended periods

- Do not expose device to direct sunlight, high temperature or high humidity.
- The cover on the guide cap should be closed at all times when device is not in use.

4. Sales inquiries

Fiber Optics Components & System Div. Fujikura Ltd
 1-5-1 Kiba, Koto-ku, Tokyo 135-8512, JAPAN
 TEL: +81-3-5606-1205 FAX: +81-3-5606-1536
 E-mail: telcon@fujikura.co.jp

5. Device construction

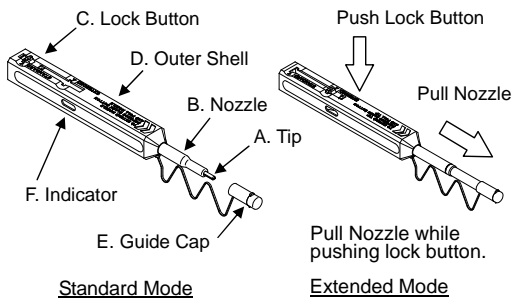

	View of Indicator	View of the Nozzle end
Full	Cloth (White)	Tip (Black)
Little	Cloth (White) Red	Cloth (White)
Empty	Red	Tip (Black) No Cloth (Black)


Identification of remaining cloth

No.	Part Name	Function
A	Tip	Lead the cleaning cloth to the optical connector end face.
B	Nozzle	Lead tip to the optical connector end face.
C	Lock Button	Push the button to extend and contract the nozzle.
D	Outer Shell	Push the outer shell to clean the connector.
E	Guide Cap	Acts as dust cap or cleaning adapter for connector plug.
F	Indicator	Provides indication of remaining cleaning cloth.


6. Applications

Recessed 2.0mm Termini


1. Remove Guide Cap from the device.

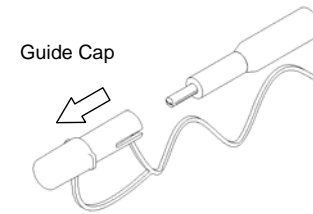

2. Insert tip of cleaner into sleeve of the connector

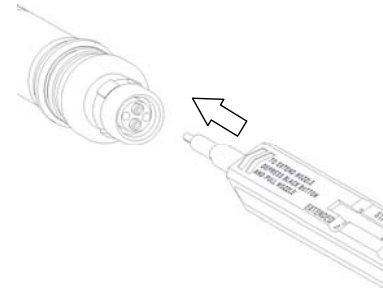

3. Push the Outer Shell to start cleaning the 2.0mm termini. A "click" sound indicates end of cleaning process. Close the cover after use.

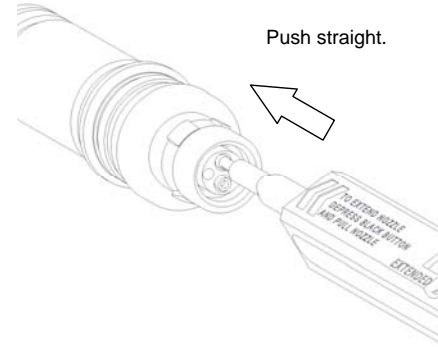


Be careful not to slant the One-Click™ Cleaner M20 while inserting into the adapter.

Do not overly exert force during insertion as this may cause damage to both the connector and the One-Click™ Cleaner M20.


If pushing Outer Shell is inhibited, remove One-Click™ Cleaner M20 from adapter and ensure that there is no sizeable debris inhibiting the cleaning process.

Protruding 2.0mm Termini


1. Open the Cover on the Guide Cap.

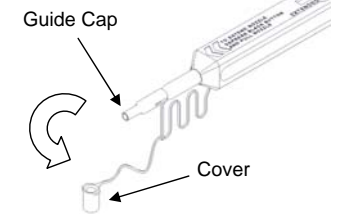

2. Insert tip of cleaner into sleeve of the connector with the Guide Cap on.

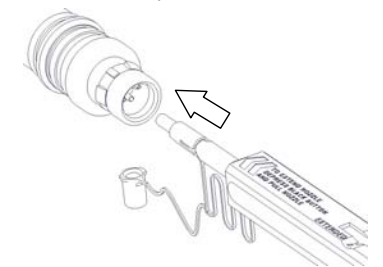

3. Push the Outer Shell to start cleaning the 2.0mm termini. A "click" sound indicates end of cleaning process. Close the cover after use.

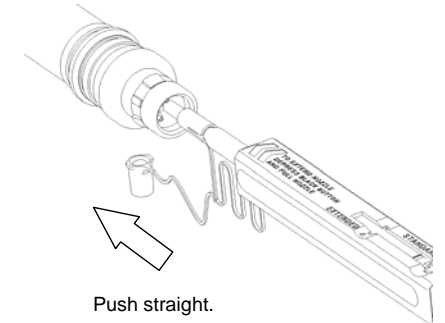

Be careful not to slant connector while inserting into the Guide cap.

Do not overly exert force during insertion as this may cause damage to both the connector and the One-Click™ Cleaner M20.

If pushing Outer Shell is inhibited, remove One-Click™ Cleaner M20 from adapter and ensure that there is no sizeable debris inhibiting the cleaning process.