One-Click[®] Cleaner SN[®] Duplex Instruction Manual

Thank you for choosing the One-Click® Cleaner SN® Duplex.

The One-Click[®] Cleaner SN[®] Duplex is a high-performance device designed for cleaning the ferrule end faces of SN[®] Connector.

Please carefully read this instruction manual before using this device.

1. Safety precautions



Though our device is deemed safe, improper usage or handling can still inflict injury to others.

One-Click Cleaner® SN® is designed to clean SN® connector only. Fujikura is not liable for damage caused in attempt to apply this device to other applications.

2. Notes on usage

Do not attempt to disassemble as this can cause damage to the device and void warranty. Do not re-use cleaning cloth as this will eliminate its cleaning ability.

Do not touch the cleaning cloth as this will cause contamination.


Do not pull the cleaning cloth, use only the device body.

Do not use this cleaner when the cloth is empty, as this can cause damage to the connector. Please keep it away from items that are sensitive to magnetism.

3. Notes on storage for extended periods

Do not expose device to direct sunlight, high temperature or high humidity. The cover on the guide cap should be closed at all times when device is not in use.

4. Device construction

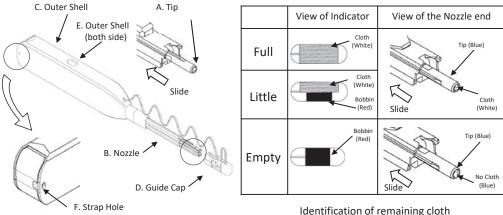


No.	Part Name	Function
А	Тір	Lead the cleaning cloth to the optical connecter end face.
В	Nozzle	Lead tip to the optical connecter end face.
С	Outer Shell	Push the outer shell to clean the connector.
D	Guide Cap	Acts as dust cap or cleaning adapter for connector plug.
E	Indicator(both side)	Provides indication of remaining cleaning cloth.
F	Strap Hole	Can pass the strings through the strap hole.

One-Click® is trade mark of Fujikura.Ltd SN ® is a Registered Trademark of Senko Advanced Components, Inc. 2019 ©

6. Applications

<Connector inside adapter>

and One-Click[®] Cleaner SN[®] Duplex.

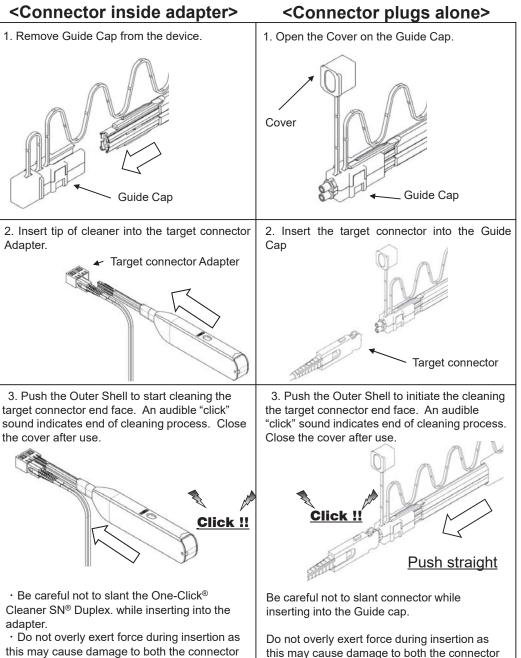

and One-Click[®] Cleaner SN[®] Duplex